

1/29/26, 12:44 PM

2. Tap Next, Set Date.

Step 2: Date & Time

1. Enter Year, Month, Day, and Time
2. Set NTP Server Settings to Disabled
3. Tap Next, Set Maintenance Mode Password

Step 3: Maintenance Mode Password

1. Create a new Maintenance Password, then tap Enter.

Note: Strong password is required. The password must be a minimum of 8 characters and contain at least one of each: lower case letter, upper case letter, number, and special character.

2. Password with badge, leave as Disabled (Default) to allow a user to access Maintenance Mode without requiring the password.
3. Tap Next, Add Device ID

972 532 9272


AP
Always Designing
For People

Step 4: Add Device ID

1. Enter the Device ID
2. Enter the Device Password (if applicable)
3. Tap Next, Connect to Local Network

**Step 5: Connect to Network**

1. Tap Ethernet
 - . If using DHCP, tap DHCP
 - . If using STATIC, tap STATIC then enter the required information provided by your IT, tap Save Configuration
2. To connect wirelessly (only if equipped), tap Wi-Fi and follow the steps outlined in the Wireless Setup section found on page 10.
3. Set Proxy Server to Disabled, tap Save Settings
4. Tap Next, Connect to Server

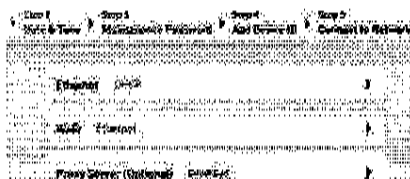

InTouch
Information & Learning