


Troubleshooting Pocket Guide

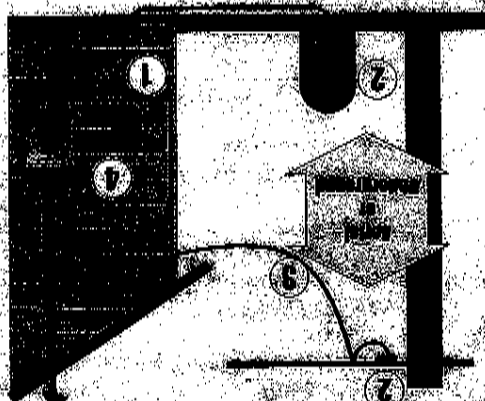

1 At the Ground Block

- Use FVD to Check All Connections
- Verify Bonding is in Spec
- Disconnect Drop at Ground Block
- Inspect the Connector
- Put a barrel on the Drop

2 At the Tap

- Verify Drop Tag
- Inspect Drop and Connector
- Verify DS and TX are in Spec
- TDR Drop and Check for Ingress
- Perform Pressure Test
- When Drop is Clear, Reconnect

3 At the Ground Block

- Verify Drop Loss is Correct
- Inspect Connectors and Splitters
- Pressure Test Indoor Wiring
- Check Home for Ingress
- Perform OneCheck

4 Return to Front Device

- Verify Drop Loss is Correct
- Verify Repairs
- Perform OneCheck

