


Lightning Cable Replacement Instructions:
PowerSync Cart® 40 for iPad and iPad mini
(HE405 & HE407)



1. Turn off and unplug the PowerSync Cart® 20 or 40.



Open the front doors of the cart.

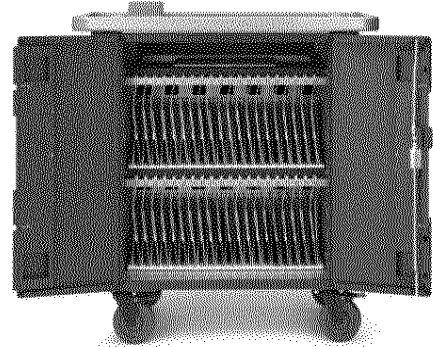


2. To gain access to the 20 right angle Lightning cables, the cable management bracket will need to be removed.

It is held in place by four M3 security screws or four Phillips headed screws.


A 2mm hex key or 5/64 Allen wrench will be used to remove the security screws or a Philips headed screw driver will work.

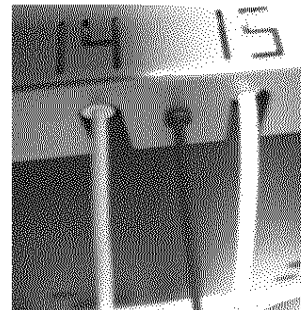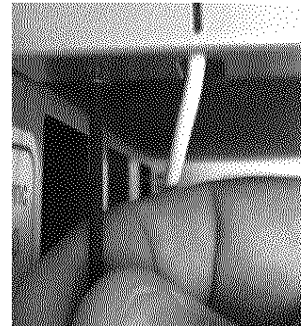


3. With the four security screws removed, the cable management bracket can be lifted out of place.

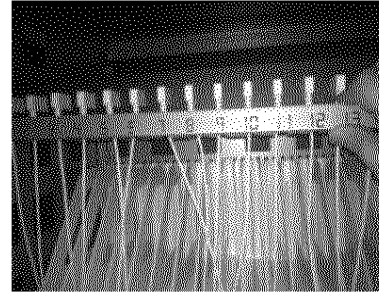

4. Now the defective right angle Lightning cable can be removed.

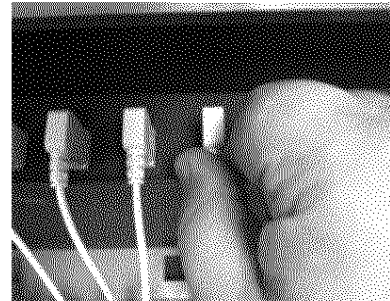

The new Lightning cable can be inserted into the USB port in the cart's power module.

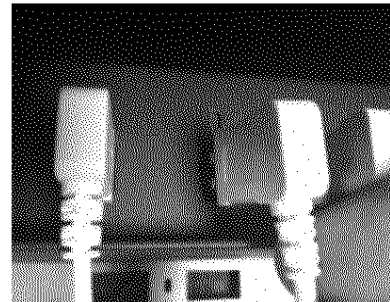

6. Repeat step 4 for the remaining right angle Lightning cables that need to be replaced.

Once complete, the cable management bracket can be put back into place and reattached.

Finally, plug the cart back into a wall outlet and turn the power switch on for use.

